


COAT



CONSERVE



COOL

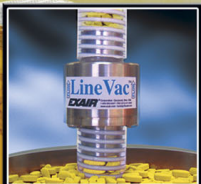

CONVEY



CLEAN

EXAIR

30 Years



**USB
Data Logger
for the
Digital
Flowmeter**



26 CATALOG



**YOU REQUESTED THIS CATALOG AND PRICE LIST.
PLEASE SEE MAILING LABEL ON BACK COVER.**

Terms and Conditions 2

EXAIR Optimization 3

Electronic Flow Control 4
 Digital Sound Level Meter 6
 Ultrasonic Leak Detector 7
 Digital Flowmeter 9

Air Knives 11

Super Air Knife 11
 PVDF Super Air Knife 17
 Universal Air Knife Mounting System 20
 Long Super Air Knife 22
 Standard Air Knife 24
 Full-Flow Air Knife 27

Air Wipes 29

Super Air Wipes 29
 Standard Air Wipes 33

Air Amplifiers 35

Super Air Amplifiers 37
 Adjustable Air Amplifiers 41

Air Nozzles and Jets 43

Air Nozzles 43
 Super Air Nozzles 46
 Air Jets 50
 High Force Air Nozzles 52
 Large Super Air Nozzles 53
 Super Air Nozzle Clusters 56
 Stay Set Hoses 56

Atomizing Nozzles 59

Internal Mix Narrow Angle Round Atomizing Nozzles 60
 Internal Mix Wide Angle Round Atomizing Nozzles 61
 Internal Mix Flat Fan Atomizing Nozzles 62
 External Mix Round Atomizing Nozzles 63
 External Mix Narrow Angle Flat Fan Atomizing Nozzles 64
 External Mix Wide Angle Flat Fan Nozzles 65
 Siphon Fed Round Atomizing Nozzles 66
 Siphon Fed Flat Fan Atomizing Nozzles 67

No Drip Internal Mix Narrow Angle Round Atomizing Nozzles 68

No Drip Internal Mix Wide Angle Round Atomizing Nozzles 68

No Drip Internal Mix Flat Fan Atomizing Nozzles 68

No Drip External Mix Round Atomizing Nozzles 68

No Drip External Mix Narrow Angle Flat Fan Atomizing Nozzles 68

No Drip External Mix Wide Angle Flat Fan Atomizing Nozzles 68

No Drip Siphon Fed Round Atomizing Nozzles 68

No Drip Siphon Fed Flat Fan Atomizing Nozzles 68

Safety Air Guns 70

Chip Shields 71
 Precision Safety Air Guns 72
 Soft Grip Safety Air Guns 72
 Heavy Duty Safety Air Guns 74
 Super Blast Safety Air Guns 75

Static Eliminators 77

Super Ion Air Knife 79
 Power Supplies 81
 Standard Ion Air Knife 85
 Ionizing Bars 87
 Super Ion Air Wipes 89
 Ion Air Cannon 91
 Ion Air Gun 93
 Ion Air Jet 95
 Stay Set Ion Air Jet 95
 Ionizing Point 97
 Static Meter, AC Sensor 98

E-Vac® Vacuum Generators 99

How to Build an E-Vac System 100
 In-Line 103
 Modular 103
 Adjustable 105
 Vacuum Cups 107

Air Operated Conveyors 111

Line Vac 111
 Threaded Line Vac 117
 Heavy Duty Line Vac 119
 Light Duty Line Vac 121

Industrial Housekeeping 123

Reversible Drum Vac 123
 Chip Trapper 125
 Chip Vac 127
 Heavy Duty Dry Vac 129
 Heavy Duty HEPA Vac 131
 Vac-u-Gun 133
 Deep Hole Vac-u-Gun 135

Vortex Tubes & Spot Cooling 137

Vortex Tubes 137
 Adjustable Spot Cooler 145
 Mini Cooler 148

Cold Gun Aircoolant Systems 149

Cabinet Cooler® Systems 153

NEMA 12, 4 and 4X 155
 Electronic Temperature Control 158

Accessories 162

Silencing Mufflers 162
 Filters 164
 Regulators 165
 Valves, Swivels, Thermostats 166
 Magnetic Bases, Stay Sets, Hoses 167
 Receiver Tank, Fittings 168

Page 3 **EXAIR Optimization**
 Minimize Compressed Air Use and Detect Wasteful Leaks

Page 11 **Air Knives**
 Blowoff, Clean, Dry and Cool with Less Noise and Air Consumption

Page 29 **Air Wipes**
 Blowoff, Dry, Clean and Cool Pipe, Cable, Extruded Shapes and Hose

Page 35 **Air Amplifiers**
 Vent, Exhaust, Cool, Dry and Clean - with No Moving Parts

Page 43 **Air Nozzles and Jets**
 Reduce Noise Levels and Air Costs on Blowoff Operations

Page 59 **Atomizing Nozzles**
 All Stainless Steel Construction for Durability and Corrosion Resistance!

Page 70 **Safety Air Guns**
 Safety Air Guns Use Engineered Air Nozzles for High Performance

Page 77 **Static Eliminators**
 Eliminate Static Electricity, Dust and Shock Hazard

Page 99 **E-Vac® Vacuum Generators**
 Vacuums for Lifting, Clamping, Mounting and Placement

Page 111 **Air Operated Conveyors**
 Convey Parts, Materials and Waste - with No Moving Parts

Page 123 **Industrial Housekeeping**
 Reliable Vacuums for Chip Removal, Liquid Transfer and Cleaning

Page 137 **Vortex Tubes and Spot Cooling**
 Cold Air for Industrial Spot Cooling Problems

Page 149 **Cold Gun Aircoolant Systems**
 Cool Machining Operations with Clean, Cold Air

Page 153 **Cabinet Cooler® Systems**
 Cool and Purge NEMA 12, 4 and 4X Electrical Control Panels

Page 162 **Accessories**
 Mufflers, Filters, Regulators, Valves, Swivel Fittings and More

Terms and Conditions (U.S. and Canada Only)

Terms: Net 30 days upon credit approval, Visa, MasterCard, Discover and American Express.



Cards

ICC (International Chamber of Commerce) INCOTERM 2010: EX WORKS (EXAIR Corporation, 11510 Goldcoast Dr., Cincinnati, Ohio 45249, USA.)

Delivery: All cataloged products are shipped from stock, via U.P.S. within 24 hours after receipt of order. Priority shipment is available upon request.

Ordering: Call 1-800-903-9247 or 513-671-3322 Worldwide
8:00 a.m. to 5:00 p.m. ET (Mon. - Fri.)
Fax toll free 1-866-329-3924 or
513-671-3363 Worldwide
E-mail: orders@exair.com
www.exair.com (secure web site)

Remit to address (payments only):

EXAIR Corporation
Location 00766
Cincinnati, Ohio 45264-0766

Tax: Sales and use tax, where applicable, are not included.

Technical Assistance: Please call our Application Engineering Department, 1-800-90-EXAIR (1-800-903-9247).

OSHA and CE Compliance: EXAIR compressed air products comply with OSHA's Safety Requirements, the EU General Product Safety Directive (2001/95/EC) and meet the noise limitation requirements of the EU Machinery Directive (2006/42/EC). EXAIR's Electronic Flow Control and Electronic Temperature Control meet the low voltage standards of the EU Low Voltage Directive (2006/95/EC). They help companies comply with the Noise Directive (2003/10/EC) along with pending changes to the workplace noise requirements due to the implementation of the Physical Agents Directive (2003/10/EC). These directives are non-marking directives and do not allow display of the CE mark. Some EXAIR products display the CE mark where there are applicable directives. All sound level measurements are taken at 3 feet away.

RoHS: Electrical portions of EXAIR's static eliminators, EFC, ETC, solenoid valves, and thermostats comply with the RoHS (Restriction of Hazardous Substances) Directive 2002/95/EC, including the amendment outlined in the European Commission decision L 214/65.

Reach: Per Regulation (EC) No 1907/2006 Title I, Article 3, paragraph 3, the European Union has recently enacted legislation to register chemicals and substances imported into the EU to ensure a high level of protection of human health and the environment.

Per Title II, Article 7, paragraph 1, articles (products) must be registered when a substance is intended to be released under normal or reasonably foreseeable conditions of use and it is present in those articles in quantities totaling over 1 metric ton per producer or importer per year. Registration of EXAIR products is not required since they do not contain substances that are intentionally released.

Copyright Restrictions: The content of the EXAIR Catalog, including all photos, graphics, drawings and arrangements are proprietary to EXAIR Corporation and are protected by the United States and international copyright and trademark laws. You are authorized to use the contents of the EXAIR Catalog for personal use or as it relates to your role as a current or prospective customer of EXAIR. The contents of this catalog may not be copied or modified for any type of publication or distribution without the prior written consent of EXAIR Corporation. The content of the EXAIR Catalog is the intellectual property solely of the EXAIR Corporation with no rights transferred to other parties. No part of this catalog may be reproduced for any commercial purposes without the express authorization in writing by the EXAIR Corporation.

Trademarks: "EXAIR", "Cabinet Cooler", "E-Vac", "Intelligent Compressed Air", and "Compressed Air Intelligence" are registered trademarks of the EXAIR Corporation. The EXAIR logo, product names, designs and descriptive phrases are trademarked by EXAIR Corporation. These trademarks may not be used without prior written permission of the EXAIR Corporation.

EFC, Digital Flowmeter, Digital Sound Level Meter, High Power Cold Gun, Super Air Knife, Standard Air Knife, Full-Flow Air Knife, Air Cannon, Super Air Amplifier, Adjustable Air Amplifier, Super Air Nozzle, Micro Air Nozzle, High Power Safety Air Nozzle, Stay Set Hose, Super Blast Safety Air Gun, Super Air Wipe, Standard Air Wipe, Super Ion Air Knife, Standard Ion Air Knife, Super Ion Air Wipe, Ion Air Cannon, Ion Air Gun, Ion Air Jet, Ionizing Point, Stay Set Ion Air Jet, Line Vac, Chip Vac, Heavy Duty Dry Vac, Reversible Drum Vac, Chip Trapper, Vac-u-Gun, Air Disk, Air Sift, Mini Cooler, Cold Gun Aircoolant System, and ETC are trademarks of EXAIR Corporation.



Intelligent Compressed Air® products are identified throughout this catalog that can help your plant save tens of thousands of dollars over the course of a single year. The Best Practices for Compressed Air Systems manual published by the Compressed Air Challenge® recommends products like the Super Air Knife®, Super Air Amplifier®, and the family of Super Air Nozzles® for energy conservation. Many of the products shown offer unique ways to solve common industrial problems using compressed air. Compressed Air Challenge is a registered trademark of Compressed Air Challenge, Inc.


EXAIR products are subject to ongoing development. Specifications are subject to change without notice.
Some products in this catalog are covered by U.S. Patent #5402938, #8153001 and #8268179 and others may be U.S. Patent Pending.
Copyright ©2013 EXAIR Corporation. All Rights Reserved.

Warranty: 5 Year "Built To Last" Warranty against defects in workmanship and materials on all compressed air products*. Defective products must be returned freight prepaid for repair or replacement at our option. This warranty applies under conditions of normal use, but does not apply to defects that result from intentional damage, negligence, unreasonable use, wear or exposure.



*5 Year Warranty applies to compressed air products only.
A 1 Year Warranty applies to all accessories and electrically powered products.

EXAIR's Unconditional Guarantee: Extends to all U.S. and Canadian customers and includes invoiced U.S. Ground Service shipping charges. Products returned after the 30 day guarantee period are subject to a 15% restocking charge. Products must be returned freight prepaid.

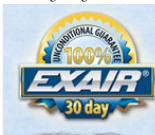

EXAIR unconditionally guarantees its catalog products for 30 days.

If you are not satisfied for any reason within that time, you may return the product for full credit with no restocking charge.

EXAIR® Corporation
11510 Goldcoast Dr.
Cincinnati, Ohio 45249-1621

Phone Number: (513) 671-3322
Fax Number: (513) 671-3363
E-mail: techhelp@exair.com
Web Site: www.exair.com



E-Vac® Vacuum Generators

Vacuums for lifting, clamping, mounting and placement!

What Is The E-Vac?

EXAIR's compressed air powered E-Vac single stage vacuum generators are the low cost way to create a vacuum for:

- Pick and place
- Clamping
- Lifting
- Chucking
- Alignment
- Surface mounting

E-Vac compressed air powered vacuum pumps provide instantaneous response and are most commonly used for pick and place operations. They are available in a variety of sizes and flows for a wide range of applications.

Why The E-Vac?

The E-Vac vacuum generators have been engineered for high efficiency to minimize air consumption. These single stage, all aluminum units provide consistent, steady vacuum, unlike mechanical vacuum pumps. Dust and small particulates easily pass through the vacuum generator and they have no moving parts, making them maintenance free.

EXAIR's E-Vac Vacuum Generator is available in 3 styles:

In-Line E-Vac Vacuum Generator



This single stage, cylindrical units are compact and easy to mount at the point of use. They can be held in place by threading them directly onto a compressed air line or with the use of a mounting clip. There are 7 models available for use with porous materials like cardboard, with vacuum levels up to 21" Hg (71 kPa) and vacuum flows up to 18.5 SCFM (524 SLPM). There are 7 models available for use with non-porous materials such as glass with vacuum levels up to 27" Hg (91 kPa) with vacuum flows up to 15.8 SCFM (447 SLPM).

Modular E-Vac Vacuum Generator

These units perform exactly the same as the In-Line Vacuum Generators, but are of a block design and incorporate a series of holes for convenient mounting.

Adjustable E-Vac Vacuum Generator

This series of vacuum generators permits easy adjustment by simply loosening the locknut and turning the exhaust to increase or decrease the level of vacuum and vacuum flow. This style is also an excellent choice where large particulates may be present and passed through the vacuum system. There are 4 models with adjustable vacuum up to 25" Hg (85 kPa) and vacuum flow up to 81 SCFM (2,294 SLPM).

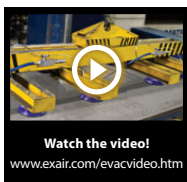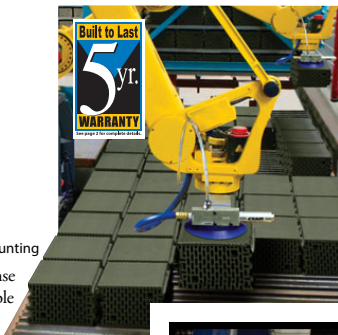

In-Line E-Vac



Modular E-Vac



Adjustable E-Vac

Vacuum Generators

Applications

- Pick and place parts and equipment
- Bag/package opening
- Label placement
- Vacuum forming
- Mold evacuation
- Vacuum filling
- Leak testing
- Evacuate containers
- Clamping and chucking
- Paper alignment and feed in printing equipment
- Vacuum packaging
- Surface mounting
- Vacuum press for wood veneers and laminates
- Carton forming
- Robotic tooling
- Vacuum liquids for testing

Advantages

- Compact, portable
- Single stage design eliminates fluctuations in vacuum
- Quiet
- Instantaneous vacuum
- Easy to mount at point of use
- Lightweight, rugged
- No moving parts – no maintenance
- 32 models
- Fast response – increases cycle time
- Durable 6061 aluminum construction
- Safe operation - no electricity

E-Vac® Vacuum Generators

How to Build An E-Vac System:

1. Select the E-Vac type.

- Determine if the part to be lifted is porous or non-porous (page 101 and 102).
- Select a style - In-Line, Modular or Adjustable (pages 102 and 103).

The E-Vac type determines max. vacuum available for lifting the part and vacuum cup selection.

| | |
|------------------|--|
| Porous | low vacuum generators max. vacuum = 21" Hg (71 kPa) |
| Non-porous | high vacuum generators max. vacuum = 27" Hg (91 kPa) |
| Adjustable E-Vac | vacuum generators max. vacuum = 25" Hg (85 kPa) |

Need Help Selecting the Correct E-Vac?

Our Application Engineers can assist you in determining the correct model E-Vac and vacuum cups (if required). Call 1-800-903-9247.

2. Determine the weight of the part.

3. Multiply the weight by the vacuum cup safety factor (see page 107) for the total vacuum cup capacity needed.

4. Determine the number of vacuum cups needed by considering the following:

- How many cups are needed to distribute the weight for stable lifting and placement?
- What is the weight that each vacuum cup can lift based on maximum vacuum available (E-Vac type)?
- Select vacuum cups from chart on page 107 based on max. vacuum available (E-Vac type) and holding weight/cup.

5. To choose an E-Vac model number, consider the entire vacuum system from the E-Vac to the part.

- Number of vacuum cups per E-Vac
- Length and size of vacuum tubing
- Vacuum cup size and type

- The volume of air to evacuate from your vacuum system and the vacuum flow of the E-Vac you've selected (pages 101, 102, and 106) will determine the time it takes from E-Vac activation to vacuum cup holding the part. As the vacuum level in the system increases, the volume of evacuating air decreases.
- A lower volume of air in the vacuum system and/or a higher capacity (SCFM/SLPM) E-Vac will give faster pick-up times.
- An exact pick-up time cannot be calculated.
- If the E-Vac vacuum generator doesn't meet your needs, return it for a different model, with no restocking charge.

Here is an example using the steps outlined above:

A sheet of material measures 3' x 3' (91m x 91m) and weighs 25lbs (11.3kg). Each sheet is in a stack and will be placed on a conveyor.

If it is porous like wood and positioned vertically:

- Choose a porous, low vacuum E-Vac. In this case the Modular style will be used for easy mounting. The maximum vacuum is 21" Hg (71 kPa).
- The weight is 25 lbs (11.3kg).
- Since the part is picked-up and hung on an overhead conveyor vertically, the safety factor is 4. The vacuum cup capacity needed is $4 \times 25 = 100$ lbs (45.4kg).
- Four vacuum cups will be used for stability when lifting the sheet. Each cup will need at least a 25 lb (11.3kg) capacity. In the table on page 107, at 21" Hg (71 kPa), the Model 900755 Vacuum Cup will hold up to 25.3 lbs (11.5kg).
- There are 4 small round vacuum cups that are positioned close to one another. The vacuum system has a small to medium volume and pick-up and release time is not critical. To reduce the sound level, use the straight through muffler.

Order: (1) Model 820008M Modular E-Vac
(4) Model 900755 Vacuum Cups

If it is non-porous like glass and positioned horizontally:

- Choose a non-porous, high vacuum E-Vac. In this case the Modular style will be used for easy mounting. The maximum vacuum is 27" Hg (91 kPa).
- The weight is 25 lbs (11.3kg).
- Since the part is picked-up and placed on a belt conveyor horizontally, the safety factor is 2. The vacuum cup capacity needed is $2 \times 25 = 50$ lbs (22.7kg).
- Four vacuum cups will be used for stability when lifting the sheet. Each cup will need at least a 12.5 lb (5.7kg) capacity. In the table on page 107, at 27" Hg (91 kPa), the Model 900754 Vacuum Cup will hold up to 20.8 lbs (9.4kg).
- There are 4 small round vacuum cups that are positioned close to one another. The vacuum system has a small to medium volume and pick-up and release time is not critical. To reduce the sound level, use the straight through muffler.

Order: (1) Model 830006M Modular E-Vac
(4) Model 900754 Vacuum Cups

The Model 840008M Adjustable E-Vac can be substituted for picking up the wood or the glass since the vacuum level and vacuum flow is easily adjusted to suit the porous or non-porous application. The Adjustable E-Vac is especially useful for loads that vary.

Low Vacuum Generators For Porous Applications

Low vacuum units up to 21" Hg (71 kPa) with vacuum flows up to 18.5 SCFM (524 SLPM) are typically used for porous materials such as cardboard and delicate materials. The low level vacuum prevents any warping, marring, dimpling or disfiguring of the surface due to excessive vacuum. This style generates more vacuum flow to overcome porosity and leakage. There are 7 models in each style (In-Line and Modular) that vary by flow and vacuum level.

Choose the E-Vac by the SCFM (SLPM) flow that best suits the performance needed for your application (see Performance table below).

E-Vac Kits give you the ability to experiment with an assortment of vacuum cups. Kits include a muffler, an assortment of (4) pairs of vacuum cups (closely matched to the performance of that E-Vac), (2) straight, (2) elbow and (1) tee vacuum fittings, 10' of vacuum tubing and a mounting clip.

E-Vac Deluxe Kits include the same items as the standard kit with the addition of an automatic drain filter separator for the compressed air supply and pressure regulator (with coupler).



Create your own vacuum system!

Modular E-Vac with Straight Through Muffler, push-in connectors, vacuum tubing and a round vacuum cup (shown).



In-Line E-Vac Vacuum Generators for porous applications.



Modular E-Vac Vacuum Generators for porous applications.

| In-Line and Modular E-Vac Low Vacuum Generators For Porous Applications | Model 1.5 SCFM 43 SLPM | Model 2.1 SCFM 60 SLPM | Model 3.1 SCFM 88 SLPM | Model 5.4 SCFM 153 SLPM | Model 8.4 SCFM 238 SLPM | Model 12.6 SCFM 357 SLPM | Model 16.8 SCFM 476 SLPM |
|---|------------------------|------------------------|------------------------|-------------------------|-------------------------|--------------------------|--------------------------|
| In-Line E-Vac Only | 800001 | 800002 | 800003 | 800005 | 800008 | 800013 | 800017 |
| In-Line E-Vac with Straight Through Muffler | 800001M | 800002M | 800003M | 800005M | 800008M | 800013M | 800017M |
| In-Line E-Vac Kit with Straight Through Muffler | 801001M | 801002M | 801003M | 801005M | 801008M | 801013M | 801017M |
| In-Line E-Vac Deluxe Kit with Straight Through Muffler | 802001M | 802002M | 802003M | 802005M | 802008M | 802013M | 802017M |
| Modular E-Vac Only | 820001 | 820002 | 820003 | 820005 | 820008 | 820013 | 820017 |
| Modular E-Vac with Straight Through Muffler | 820001M | 820002M | 820003M | 820005M | 820008M | 820013M | 820017M |
| Modular E-Vac Kit with Straight Through Muffler | 821001M | 821002M | 821003M | 821005M | 821008M | 821013M | 821017M |
| Modular E-Vac Deluxe Kit with Straight Through Muffler | 822001M | 822002M | 822003M | 822005M | 822008M | 822013M | 822017M |

Note: Replace 'M' with 'H' for Standard Muffler

In-Line and Modular E-Vac Low Vacuum Generator Performance (Porous)

| In-Line E-Vac Model | Modular E-Vac Model | Air Consumption SCFM @ 80 PSIG SLPM @ 5.5 BAR | Sound Level in dBA | | | Vacuum Flow (SCFM/SLPM) vs. Vacuum Level ("Hg/ kPa) | | | | | | | | | | | | | | | | | | |
|---------------------|---------------------|---|--------------------|------------------|--------------------------|---|-------|-------|-------|-------|-------|-------|-------|---------|------|-------|------|-------|------|------|------|-----|----|----|
| | | | No Muffler | Standard Muffler | Straight Through Muffler | Vacuum Level ("Hg/ kPa) | | | | | | | | | | | | | | | | | | |
| | | | | | | 0 | 3/10 | 6/20 | 9/31 | 12/41 | 15/51 | 18/61 | 21/71 | Max Vac | | | | | | | | | | |
| 800001 | 820001 | 1.5 | 42.5 | 80 | 72 | 60 | 1.52 | 43.0 | 14.1 | 39.9 | 1.25 | 35.4 | 1.10 | 31.1 | 0.95 | 26.9 | 0.85 | 24.1 | 0.56 | 15.9 | 0.00 | 0.0 | 21 | 71 |
| 800002 | 820002 | 2.1 | 59.5 | 80 | 72 | 63 | 2.22 | 62.9 | 2.05 | 58.0 | 1.91 | 54.1 | 1.77 | 50.1 | 1.45 | 41.1 | 0.95 | 26.9 | 0.56 | 15.9 | 0.00 | 0.0 | 21 | 71 |
| 800003 | 820003 | 3.1 | 87.8 | 89 | 74 | 70 | 3.75 | 106.2 | 3.52 | 99.7 | 3.15 | 89.2 | 2.75 | 77.9 | 2.15 | 60.9 | 1.20 | 34.0 | 0.56 | 15.9 | 0.00 | 0.0 | 21 | 71 |
| 800005 | 820005 | 5.4 | 152.9 | 92 | 83 | 66 | 5.59 | 158.3 | 5.23 | 148.1 | 4.51 | 127.7 | 3.75 | 106.2 | 3.34 | 94.6 | 2.51 | 71.1 | 1.25 | 35.4 | 0.00 | 0.0 | 21 | 71 |
| 800008 | 820008 | 8.4 | 237.9 | 97 | 88 | 74 | 7.70 | 218.0 | 6.95 | 196.8 | 6.30 | 178.4 | 5.30 | 150.1 | 4.23 | 119.8 | 3.15 | 89.2 | 1.31 | 37.1 | 0.00 | 0.0 | 21 | 71 |
| 800013 | 820013 | 12.6 | 356.8 | 99 | 91 | 78 | 15.50 | 438.9 | 14.50 | 410.6 | 13.15 | 372.4 | 11.35 | 321.4 | 8.70 | 246.3 | 4.03 | 114.1 | 0.00 | 0.0 | 0.00 | 0.0 | 18 | 61 |
| 800017 | 820017 | 16.8 | 475.7 | 101 | 91 | 81 | 18.50 | 523.8 | 17.20 | 487.0 | 14.70 | 416.2 | 12.40 | 351.1 | 9.80 | 277.5 | 5.00 | 141.6 | 0.00 | 0.0 | 0.00 | 0.0 | 18 | 61 |

E-Vac® Vacuum Generators

High Vacuum Generators For Non-Porous Applications

High vacuum units up to 27" Hg (91 kPa) with vacuum flows up to 15.8 SCFM (447 SLPM) are typically used for non-porous materials such as glass, steel sheet, and plastic. There are 7 models in each style (In-Line and Modular) that vary by flow and vacuum level.

Choose the E-Vac by the SCFM (SLPM) flow that best suits the performance needed for your application (see Performance table below).

E-Vac Kits give you the ability to experiment with an assortment of vacuum cups. Kits include a muffler, an assortment of (4) pairs of vacuum cups (closely matched to the performance of that E-Vac), (2) straight, (2) elbow and (1) tee vacuum fittings, 10' of vacuum tubing and a mounting clip.

E-Vac Deluxe Kits include the same items as the standard kit with the addition of an automatic drain filter separator for the compressed air supply and pressure regulator (with coupler).



In-Line E-Vac Vacuum Generators for non-porous applications.



Modular E-Vac Vacuum Generators for non-porous applications.



The In-Line E-Vac with Standard Muffler (shown above) is also available with your choice of accessories that can be found on [page 110](#).

| In-Line and Modular E-Vac High-Vacuum Generators For Non-Porous Applications | Model 2.3 SCFM 65 SLPM | Model 3.3 SCFM 93 SLPM | Model 6.2 SCFM 176 SLPM | Model 8.4 SCFM 238 SLPM | Model 13.2 SCFM 374 SLPM | Model 23.1 SCFM 654 SLPM | Model 30.8 SCFM 872 SLPM |
|--|------------------------|------------------------|-------------------------|-------------------------|--------------------------|--------------------------|--------------------------|
| In-Line E-Vac Only | 810002 | 810003 | 810006 | 810008 | 810013 | 810023 | 810031 |
| In-Line E-Vac with Straight Through Muffler | 810002M | 810003M | 810006M | 810008M | 810013M | 810023M | 810031M |
| In-Line E-Vac Kit with Straight Through Muffler | 811002M | 811003M | 811006M | 811008M | 811013M | 811023M | 811031M |
| In-Line E-Vac Deluxe Kit with Straight Through Muffler | 812002M | 812003M | 812006M | 812008M | 812013M | 812023M | 812031M |
| Modular E-Vac Only | 830002 | 830003 | 830006 | 830008 | 830013 | 830023 | 830031 |
| Modular E-Vac with Straight Through Muffler | 830002M | 830003M | 830006M | 830008M | 830013M | 830023M | 830031M |
| Modular E-Vac Kit with Straight Through Muffler | 831002M | 831003M | 831006M | 831008M | 831013M | 831023M | 831031M |
| Modular E-Vac Deluxe Kit with Straight Through Muffler | 832002M | 832003M | 832006M | 832008M | 832013M | 832023M | 832031M |

Note: Replace 'M' with 'H' for Standard Muffler


In-Line and Modular E-Vac High Vacuum Generator Performance (Non-Porous)

| In-Line E-Vac Model | Modular E-Vac Model | Air Consumption SCFM @ 80 PSIG SLPM @ 5.5 BAR | | Sound Level in dBA | | | Vacuum Flow (SCFM/SLPM) vs. Vacuum Level ("Hg/ kPa) | | | | | | | | | | | | | | | | | | | | |
|---------------------|---------------------|---|-------|--------------------|------------------|--------------------------|---|-------|-------|-------|-------|-------|-------|-------|-------|-------|---------|-------|------|-------|------|-------|------|------|-----|-----|-------|
| | | | | No Muffler | Standard Muffler | Straight Through Muffler | Vacuum Level | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | 0 | 3/10 | 6/20 | 9/31 | 12/41 | 15/51 | 18/61 | 21/71 | 24/81 | 27/91 | Max Vac | | | | | | | | | | |
| 810002 | 830002 | 2.3 | 65.1 | 86 | 81 | 70 | 1.22 | 34.5 | 1.16 | 33.0 | 1.00 | 28.3 | 0.90 | 25.5 | 0.87 | 24.6 | 0.74 | 21.0 | 0.56 | 16.0 | 0.46 | 13.0 | 0.20 | 5.7 | 0.0 | 0.0 | 27.91 |
| 810003 | 830003 | 3.3 | 93.4 | 87 | 82 | 73 | 1.73 | 49.0 | 1.59 | 45.0 | 1.48 | 41.9 | 1.24 | 35.1 | 1.09 | 30.9 | 1.02 | 28.9 | 0.78 | 22.1 | 0.67 | 19.0 | 0.49 | 13.9 | 0.0 | 0.0 | 27.91 |
| 810006 | 830006 | 6.2 | 175.6 | 91 | 82 | 77 | 2.75 | 78.0 | 2.65 | 75.0 | 2.26 | 64.0 | 2.05 | 58.0 | 1.87 | 53.0 | 1.59 | 45.0 | 1.13 | 32.0 | 0.92 | 26.0 | 0.77 | 21.7 | 0.0 | 0.0 | 27.91 |
| 810008 | 830008 | 8.4 | 237.9 | 97 | 90 | 78 | 4.40 | 124.6 | 4.10 | 116.1 | 3.75 | 106.2 | 3.15 | 89.2 | 2.75 | 77.9 | 2.39 | 67.7 | 1.75 | 49.6 | 1.27 | 36.0 | 0.99 | 28.0 | 0.0 | 0.0 | 27.91 |
| 810013 | 830013 | 13.2 | 373.8 | 100 | 92 | 83 | 6.85 | 194.0 | 6.50 | 184.1 | 5.81 | 164.5 | 4.89 | 138.5 | 4.12 | 116.7 | 3.51 | 99.4 | 2.61 | 73.9 | 1.92 | 54.4 | 1.31 | 37.1 | 0.0 | 0.0 | 27.91 |
| 810023 | 830023 | 23.1 | 654.1 | 102 | 92 | 84 | 11.95 | 338.4 | 11.80 | 334.1 | 10.45 | 295.9 | 9.02 | 255.4 | 8.10 | 229.4 | 6.52 | 184.6 | 4.54 | 128.6 | 3.65 | 103.4 | 2.67 | 75.6 | 0.0 | 0.0 | 27.91 |
| 810031 | 830031 | 30.8 | 872.1 | 105 | 92 | 87 | 15.75 | 446.0 | 15.25 | 431.8 | 12.67 | 358.8 | 11.12 | 314.9 | 10.25 | 290.2 | 7.97 | 225.7 | 5.98 | 169.3 | 5.04 | 142.7 | 3.41 | 96.6 | 0.0 | 0.0 | 27.91 |

In-Line and Modular E-Vacs

EXAIR manufactures two versions of the In-Line and Modular E-Vacs – Low Vacuum and High Vacuum. The application will dictate which type of vacuum is most suitable. The dimensions and performance for each model are shown.

How The In-Line and Modular E-Vacs Work




Compressed air flows through the inlet (1), then through a single directed nozzle (2). As the airstream exhausts, it expands and increases in velocity prior to passing through the venturi (3). A vacuum inlet tangential to the primary airflow (4) is located at the suction point between the orifice and the venturi. The airflow that is drawn through the vacuum inlet mixes with the primary airstream, then exhausts on the opposite end (5).



The In-Line E-Vac (porous version) is used to lift the plywood lid of a crate in a receiving department.

In-Line E-Vac Dimensions

DOWNLOAD
drawings at
EXAIR.com

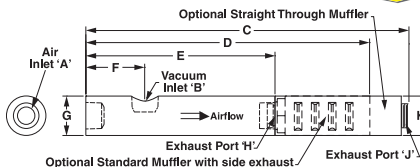

Need Help Selecting the Correct E-Vac?

Not sure how much vacuum is required for your application? Our Application Engineers can assist you in determining the correct model E-Vac and vacuum cups (if required). Call 1-800-903-9247.

In-Line Vacuum Generator Dimensions

| Model | Air Inlet A | Vacuum Inlet B | C | D | E | F | G | H | J | K | |
|---|-------------|----------------|----|-------|------|------|------|------|---------|---------|------|
| 800001, 800002, 800003, 810002, 810003, 810006 | 1/8 NPT | 1/8 NPT | in | N/A | N/A | 3.00 | 0.88 | 0.75 | 1/4 NPT | N/A | N/A |
| | | | mm | N/A | N/A | 76 | 22 | 19 | | N/A | N/A |
| 80001H, 80002H, 80003H, 810002H, 810003H, 810006H | 1/8 NPT | 1/8 NPT | in | N/A | 5.00 | 3.00 | 0.88 | 0.75 | 1/4 NPT | N/A | 0.81 |
| | | | mm | N/A | 127 | 76 | 22 | 19 | | N/A | 21 |
| 80001M, 80002M, 80003M, 810002M, 810003M, 810006M | 1/8 NPT | 1/8 NPT | in | 5.25 | N/A | 3.00 | 0.88 | 0.75 | 1/4 NPT | 1/4 NPS | 0.75 |
| | | | mm | 133 | N/A | 76 | 22 | 19 | | 1/4 NPS | 19 |
| 800005, 800008, 810008, 810013 | 1/4 NPT | 3/8 NPT | in | N/A | N/A | 4.50 | 1.50 | 1.00 | 3/8 NPT | N/A | N/A |
| | | | mm | N/A | N/A | 114 | 38 | 25 | | N/A | N/A |
| 800005H, 800008H, 810008H, 810013H | 1/4 NPT | 3/8 NPT | in | N/A | 7.50 | 4.50 | 1.50 | 1.00 | 3/8 NPT | N/A | 1.25 |
| | | | mm | N/A | 191 | 114 | 38 | 25 | | N/A | 32 |
| 800005M, 800008M, 810008M, 810013M | 1/4 NPT | 3/8 NPT | in | 7.75 | N/A | 4.50 | 1.50 | 1.00 | 3/8 NPT | 3/8 NPS | 1.00 |
| | | | mm | 197 | N/A | 114 | 38 | 25 | | 3/8 NPS | 25 |
| 800013, 800017, 810023, 810031 | 1/2 NPT | 1/2 NPT | in | N/A | N/A | 6.00 | 1.88 | 1.25 | 1/2 NPT | N/A | N/A |
| | | | mm | N/A | N/A | 152 | 48 | 32 | | N/A | N/A |
| 800013H, 800017H, 810023H, 810031H | 1/2 NPT | 1/2 NPT | in | N/A | 9.00 | 6.00 | 1.88 | 1.25 | 1/2 NPT | N/A | 1.25 |
| | | | mm | N/A | 229 | 152 | 48 | 32 | | N/A | 32 |
| 800013M, 800017M, 810023M, 810031M | 1/2 NPT | 1/2 NPT | in | 10.25 | N/A | 6.00 | 1.88 | 1.25 | 1/2 NPT | 1/2 NPS | 1.25 |
| | | | mm | 260 | N/A | 152 | 48 | 32 | | 1/2 NPS | 32 |

E-Vac® Vacuum Generators




The Modular E-Vac, connected to a series of vacuum cups, lifts sheets of wood to a surface planer.

Need Help Selecting the Correct E-Vac?

Not sure how much vacuum is required for your application?
Our Application Engineers can assist you in determining the correct model E-Vac and vacuum cups (if required). Call 1-800-903-9247.

Modular E-Vac Dimensions

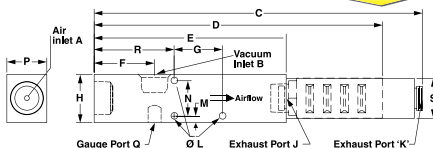

Modular Vacuum Generator Dimensions

| Model | Air Inlet A | Vacuum Inlet B | | C | D | E | F | G | H | Exhaust Port J | Exhaust Port K | L | M | N | P | Q | R | S |
|--|-------------|----------------|----|-------|------|------|------|------|------|----------------|----------------|--------------------------------|------|------|------|---------|------|------|
| 820001 820002 820003 830002 830003 830006 | 1/8 NPT | 1/8 NPT | in | N/A | N/A | 3.00 | 0.88 | N/A | 0.75 | 1/4 NPT | N/A | For #8 or M4 Screw or Smaller | 0.11 | 0.52 | 0.75 | N/A | 1.78 | N/A |
| | | | mm | N/A | N/A | 76 | 22 | N/A | 19 | | | | 3 | 13 | 19 | N/A | 45 | N/A |
| 820001H 820002H 820003H 830002H 830003H 830006H | 1/8 NPT | 1/8 NPT | in | N/A | 5.00 | 3.00 | 0.88 | N/A | 0.75 | 1/4 NPT | N/A | For #8 or M4 Screw or Smaller | 0.11 | 0.52 | 0.75 | N/A | 1.78 | 0.81 |
| | | | mm | N/A | 127 | 76 | 22 | N/A | 19 | | | | 3 | 13 | 19 | N/A | 45 | 21 |
| 820001M 820002M 830002M 830003M 830006M | 1/8 NPT | 1/8 NPT | in | 5.25 | N/A | 3.00 | 0.88 | N/A | 0.75 | 1/4 NPT | 1/4 NPS | For #8 or M4 Screw or Smaller | 0.11 | 0.52 | 0.75 | N/A | 1.78 | 0.75 |
| | | | mm | 133 | N/A | 76 | 22 | N/A | 19 | | | | 3 | 13 | 19 | N/A | 45 | 19 |
| 820005 820008 830008 830013 | 1/4 NPT | 3/8 NPT | in | N/A | N/A | 4.50 | 1.50 | 1.50 | 1.50 | 3/8 NPT | N/A | For #10 or M5 Screw or Smaller | 0.20 | 1.10 | 1.00 | 1/8 NPT | 2.20 | N/A |
| | | | mm | N/A | N/A | 114 | 38 | 38 | 38 | | | | 5 | 28 | 25 | 1/8 NPT | 56 | N/A |
| 820005H 820008H 830008H 830013H | 1/4 NPT | 3/8 NPT | in | N/A | 7.50 | 4.50 | 1.50 | 1.50 | 1.50 | 3/8 NPT | N/A | For #10 or M5 Screw or Smaller | 0.20 | 1.10 | 1.00 | 1/8 NPT | 2.20 | 1.25 |
| | | | mm | N/A | 191 | 114 | 38 | 38 | 38 | | | | 5 | 28 | 25 | 1/8 NPT | 56 | 32 |
| 820005M 820008M 830008M 830013M | 1/4 NPT | 3/8 NPT | in | 7.75 | N/A | 4.50 | 1.50 | 1.50 | 1.50 | 3/8 NPT | 3/8 NPS | For #10 or M5 Screw or Smaller | 0.20 | 1.10 | 1.00 | 1/8 NPT | 2.20 | 1.00 |
| | | | mm | 197 | N/A | 114 | 38 | 38 | 38 | | | | 5 | 28 | 25 | 1/8 NPT | 56 | 25 |
| 820013 820017 830023 830031 | 1/2 NPT | 1/2 NPT | in | N/A | N/A | 6.00 | 1.88 | 1.50 | 1.50 | 1/2 NPT | N/A | For #10 or M5 Screw or Smaller | 0.20 | 1.10 | 1.25 | 1/8 NPT | 2.50 | N/A |
| | | | mm | N/A | N/A | 152 | 48 | 38 | 38 | | | | 5 | 28 | 32 | 1/8 NPT | 64 | N/A |
| 820013H 820017H 830023H 830031H | 1/2 NPT | 1/2 NPT | in | N/A | 9.00 | 6.00 | 1.88 | 1.50 | 1.50 | 1/2 NPT | N/A | For #10 or M5 Screw or Smaller | 0.20 | 1.10 | 1.25 | 1/8 NPT | 2.50 | 1.25 |
| | | | mm | N/A | 229 | 152 | 48 | 38 | 38 | | | | 5 | 28 | 32 | 1/8 NPT | 64 | 32 |
| 820013M 820017M 830023M 830031M | 1/2 NPT | 1/2 NPT | in | 10.25 | N/A | 6.00 | 1.88 | 1.50 | 1.50 | 1/2 NPT | 1/2 NPS | For #10 or M5 Screw or Smaller | 0.20 | 1.10 | 1.25 | 1/8 NPT | 2.50 | 1.25 |
| | | | mm | 260 | N/A | 152 | 48 | 38 | 38 | | | | 5 | 28 | 32 | 1/8 NPT | 64 | 32 |

Adjustable E-Vac® Vacuum Generators

A simple turn can increase or decrease vacuum and flow!

What Is The Adjustable E-Vac?


EXAIR's Adjustable E-Vac is a series of low cost, compressed air powered vacuum generators where the vacuum and flow rates can be easily adjusted to suit the application requirements. These vacuum pumps are ideal for a wide variety of "pick and place", box opening, clamping, lifting, chucking, and surface mounting applications. They are maintenance free and have no moving parts to wear out.

Why The Adjustable E-Vac?

Engineered for high efficiency, the Adjustable E-Vac minimizes compressed air use by allowing it to be tuned to the application. With a simple turn of the unit, the vacuum and flow levels can be changed to overcome porosity and increase or decrease the lifting power. The straight-through, single stage aluminum construction requires no vacuum filter and simply passes contaminants from dirty environments through the unit so there is no clogging or loss of suction.


Adjustable E-Vac is available in 4 sizes that have adjustable vacuum rates up to 25" Hg (85 kPa) and flow rates up to 81 SCFM (2,294 SLPM). Kit configurations that include vacuum cups, fittings, tubing and a mounting clip are available.

Adjustable E-Vac Dimensions

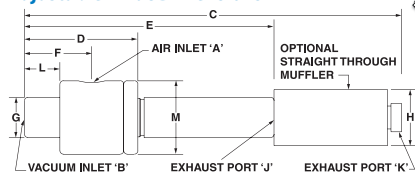

The vacuum level of the Adjustable E-Vac can quickly be changed from lifting lightweight pavers to heavy cement blocks.

How The Adjustable E-Vac Works

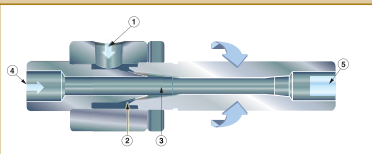

Compressed air flows through the inlet (1), then through an adjustable annular nozzle (2). As the airstream enters the vacuum flow, it expands and increases in velocity (3). A vacuum flow is induced, creating suction (4). The airflow that is drawn through the vacuum inlet mixes with the primary airstream, then exhausts on the opposite end (5).

Adjustable Vacuum Generator Dimensions

| Model | Air Inlet A | Vacuum Inlet B | | C | D | E | F | G | H | L | M | Exhaust Port J | Exhaust Port K |
|---------|-------------|----------------|----|-------|------|------|------|------|------|------|------|----------------|----------------|
| 840008 | 1/8 NPT | 1/4 NPT | in | N/A | 2.00 | 4.38 | 1.19 | 0.72 | N/A | 0.63 | 1.31 | 1/4 NPT | N/A |
| | | | mm | N/A | 51 | 111 | 30 | 18 | N/A | 16 | 33 | | |
| 840008M | 1/8 NPT | 1/4 NPT | in | 6.63 | 2.00 | 4.38 | 1.19 | 0.72 | 0.75 | 0.63 | 1.31 | 1/4 NPT | 1/4 NPS |
| | | | mm | 168 | 51 | 111 | 30 | 18 | 19 | 16 | 33 | | |
| 840015 | 3/8 NPT | 1/2 NPT | in | N/A | 2.38 | 5.44 | 1.31 | 0.97 | N/A | 0.63 | 1.56 | 1/2 NPT | N/A |
| | | | mm | N/A | 60 | 138 | 33 | 25 | N/A | 16 | 40 | | |
| 840015M | 3/8 NPT | 1/2 NPT | in | 9.69 | 2.38 | 5.44 | 1.31 | 0.97 | 1.25 | 0.63 | 1.56 | 1/2 NPT | 1/2 NPS |
| | | | mm | 246 | 60 | 138 | 33 | 25 | 32 | 16 | 40 | | |
| 840030 | 3/8 NPT | 1/2 NPT | in | N/A | 2.50 | 6.19 | 1.44 | 1.22 | N/A | 0.75 | 1.94 | 3/4 NPT | N/A |
| | | | mm | N/A | 64 | 157 | 37 | 31 | N/A | 19 | 49 | | |
| 840030M | 3/8 NPT | 1/2 NPT | in | 13.63 | 2.50 | 6.19 | 1.44 | 1.22 | 2.00 | 0.75 | 1.94 | 3/4 NPT | 3/4 NPS |
| | | | mm | 346 | 64 | 157 | 37 | 31 | 51 | 19 | 49 | | |
| 840060 | 1/2 NPT | 3/4 NPT | in | N/A | 2.75 | 6.50 | 1.56 | 1.47 | N/A | 0.75 | 2.19 | 1 NPT | N/A |
| | | | mm | N/A | 70 | 165 | 40 | 37 | N/A | 19 | 56 | | |
| 840060M | 1/2 NPT | 3/4 NPT | in | 13.94 | 2.75 | 6.50 | 1.56 | 1.47 | 2.00 | 0.75 | 2.19 | 1 NPT | 1 NPS |
| | | | mm | 354 | 70 | 165 | 40 | 37 | 51 | 19 | 56 | | |

E-Vac® Vacuum Generators

Adjustable E-Vac Vacuum Generators

Choose the Adjustable E-Vac by the SCFM (SLPM) flow that best suits the performance needed for your application (see Performance table below).

Adjustable E-Vac Kits give you the ability to experiment with an assortment of vacuum cups. E-Vac Kits include a muffler, an assortment of (4) pairs of vacuum cups (closely matched to the performance of that E-Vac), (2) straight, (2) elbow and (1) tee vacuum fittings, 10' of vacuum tubing and a mounting clip.

Adjustable E-Vac Deluxe Kits include the same items as the standard kit with the addition of an automatic drain filter separator for the compressed air supply and pressure regulator (with coupler).



Adjustable E-Vac Vacuum Generators have vacuum levels up to 25" Hg (85 kPa) that can be used with porous and non-porous materials.

Adjustable E-Vac Performance

The amount of vacuum created varies with the porosity of the load being picked up. Units come from the factory set to 15" Hg (51 kPa). A maximum of 25" Hg (85 kPa) can be achieved on a solid, non-porous surface, but will require increasing the air consumption and vacuum flow.

| Adjustable E-Vac | Model 8.2 SCFM 232 SLPM | Model 15.4 SCFM 436 SLPM | Model 26.4 SCFM 748 SLPM | Model 62.7 SCFM 1,775 SLPM |
|---|-------------------------------|--------------------------------|--------------------------------|----------------------------------|
| Adjustable E-Vac Only | 840008 | 840015 | 840030 | 840060 |
| Adjustable E-Vac with Straight Through Muffler | 840008M | 840015M | 840030M | 840060M |
| Adjustable E-Vac Kit with Straight Through Muffler | 841008M | 841015M | 841030M | 841060M |
| Adjustable E-Vac Deluxe Kit with Straight Through Muffler | 842008M | 842015M | 842030M | 842060M |

Adjustable Vacuum Generator Performance (15" Hg and 51 kPa - Metric)


| Model | Air Consumption SCFM @ 80 PSIG SLPM @ 5.5 BAR | | Sound Level in dBA | | Vacuum Flow (SCFM/SLPM) vs. Vacuum Level ("Hg/kPa) (Set to 15" Hg and 51 kPa - Metric) | | | | | | | | | | | |
|--------|---|--------|--------------------|--------------------------|--|--------|-------|--------|-------|--------|-------|-------|-------|-------|-------|-----|
| | | | No Muffler | Straight Through Muffler | 0 | | 3/10 | | 6/20 | | 9/31 | | 12/41 | | 15/51 | |
| | | | | | | | | | | | | | | | | |
| 840008 | 8.2 | 232.2 | 89 | 77 | 5.80 | 164.2 | 4.68 | 132.6 | 3.71 | 105.0 | 2.59 | 73.4 | 1.53 | 43.2 | 0.0 | 0.0 |
| 840015 | 15.4 | 436.1 | 95 | 77 | 18.70 | 529.5 | 16.00 | 453.1 | 12.02 | 340.3 | 7.75 | 219.4 | 4.05 | 114.7 | 0.0 | 0.0 |
| 840030 | 26.4 | 747.5 | 99 | 74 | 36.70 | 1039.2 | 32.00 | 906.1 | 25.63 | 725.8 | 17.68 | 500.5 | 7.69 | 217.8 | 0.0 | 0.0 |
| 840060 | 62.7 | 1775.4 | 107 | 85 | 81.00 | 2293.6 | 67.00 | 1897.2 | 56.33 | 1595.1 | 29.00 | 821.2 | 11.13 | 315.3 | 0.0 | 0.0 |

Adjustable Vacuum Generator Performance (25" Hg and 85 kPa - Metric)

| Model | Air Consumption SCFM @ 80 PSIG SLPM @ 5.5 BAR | | Sound Level in dBA | | Vacuum Flow (SCFM/SLPM) vs. Vacuum Level ("Hg/kPa) (Set to 25" Hg and 85 kPa - Metric) | | | | | | | | | | | | | | | | | | | |
|--------|---|--------|--------------------|--------------------------|--|--------|-------|--------|-------|--------|-------|--------|-------|--------|-------|-------|-------|-------|-------|-------|-------|------|-------|-----|
| | | | No Muffler | Straight Through Muffler | 0 | | 3/10 | | 6/20 | | 9/31 | | 12/41 | | 15/51 | | 18/61 | | 21/71 | | 24/81 | | 25/85 | |
| | | | | | | | | | | | | | | | | | | | | | | | | |
| 840008 | 12.2 | 345.5 | 104 | 89 | 5.80 | 164.2 | 5.58 | 157.9 | 5.18 | 146.5 | 4.80 | 135.9 | 4.33 | 122.5 | 3.83 | 108.3 | 2.94 | 83.2 | 1.93 | 54.5 | 0.37 | 10.5 | 0.0 | 0.0 |
| 840015 | 25.9 | 733.4 | 107 | 89 | 18.00 | 509.7 | 16.53 | 467.9 | 15.70 | 444.6 | 14.18 | 401.4 | 12.13 | 343.3 | 8.98 | 254.1 | 5.65 | 160.0 | 2.69 | 76.1 | 0.55 | 15.6 | 0.0 | 0.0 |
| 840030 | 44.8 | 1268.6 | 107 | 82 | 32.00 | 906.1 | 29.00 | 821.2 | 26.83 | 759.8 | 24.12 | 682.9 | 20.92 | 592.3 | 14.63 | 414.1 | 9.90 | 280.3 | 6.13 | 173.7 | 1.19 | 33.8 | 0.0 | 0.0 |
| 840060 | 105.2 | 2978.8 | 114 | 92 | 70.00 | 1982.1 | 66.33 | 1878.3 | 62.33 | 1765.0 | 55.50 | 1571.5 | 45.00 | 1274.2 | 30.67 | 868.4 | 18.37 | 520.1 | 8.38 | 237.4 | 2.10 | 59.5 | 0.0 | 0.0 |



Compressed air use is minimized by selecting the exact vacuum level required to lift the heavy, porous cardboard cartons.

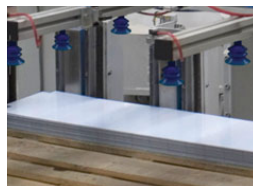

A series of bellows cups lift one plastic part at a time off of a pallet.

Choosing A Suitable Vacuum Cup

Round Cups are best suited to smooth, flat surfaces. They will grip and release quickly. These cups hold their shape with extended use and grip well to vertical surfaces. Round cups with cleats are better at lifting heavy loads. Cups without cleats can be used for light lifting.

Oval Cups provide the most vacuum due to the larger surface area. They provide more vacuum power than round cups and are suited to lifting heavy loads. They are designed to handle flat rigid sheet materials like wood, glass, cardboard boxes and composites.

Bellows Cups are best suited to textured, uneven surfaces. The folds, called "convolutions", provide a collapsible area that allows the cup to quickly compress when it touches the flat surface. The attach and release time is greater due to the significant volume of the cup.

Vacuum Cup Safety Factor

A safety factor of 2 is recommended when the vacuum cup is positioned horizontally.

A safety factor of 4 is recommended when the vacuum cup is positioned vertically.

Some companies or local codes may require a specific safety factor.

Using The Tables Below

Determine the weight of the part to be lifted. Multiply it by the safety factor of (2) when the cup will be positioned horizontally, or by (4) when positioned vertically.

Using the table below, look through the numbers highlighted in orange for the weight capacity per vacuum cup. Use enough vacuum cups to distribute the weight evenly for stable lifting and placement. The model number(s) for the vacuum cup(s) that can handle that weight are directly above (in that column) and are highlighted in blue . Details for each vacuum cup can be found on [page 108](#).

To the left of the vacuum cup weight you've selected (in that same row) is the vacuum level highlighted in green that is needed. Performance data for the In-Line and Modular E-Vacs designed for specific vacuum levels can be found on [pages 101 and 102](#). For loads that vary, Adjustable E-Vacs are the best choice ([performance shown on page 106](#)).

Weight in lbs that a vacuum cup can hold at a given vacuum

| Vacuum Cup Models | 900762 900766 | 900752 900767 | 900763 | 900764 | 900753 900768 | 900754 900769 | 900765 | 900755 900770 | 900756 900758 | 900757 900771 | 900759 | 900760 | 900761 |
|-----------------------------|------------------|------------------|--------|--------|------------------|------------------|--------|------------------|------------------|------------------|--------|--------|--------|
| Area of cup in ² | 0.4 | 0.8 | 1.0 | 1.5 | 1.8 | 3.1 | 4.4 | 4.9 | 8.3 | 14.2 | 19.6 | 28.3 | |
| Vacuum "Hg | 5 | 0.5 | 1.0 | 1.2 | 1.8 | 2.2 | 3.9 | 5.3 | 6.0 | 10.2 | 17.4 | 24.1 | 34.7 |
| | 10 | 1.0 | 1.9 | 2.5 | 3.7 | 4.3 | 7.7 | 10.7 | 12.1 | 20.4 | 34.8 | 48.2 | 69.4 |
| | 15 | 1.5 | 2.9 | 3.7 | 5.5 | 6.5 | 11.6 | 16.0 | 18.1 | 30.6 | 52.3 | 72.3 | 104.2 |
| | 20 | 2.1 | 3.9 | 4.9 | 7.4 | 8.7 | 15.4 | 21.4 | 24.1 | 40.7 | 69.7 | 96.4 | 138.9 |
| | 21 | 2.2 | 4.1 | 5.2 | 7.8 | 9.1 | 16.2 | 22.4 | 25.3 | 42.8 | 73.2 | 101.3 | 145.8 |
| | 27 | 2.8 | 5.2 | 6.6 | 10.0 | 11.7 | 20.8 | 28.9 | 32.6 | 55.0 | 94.1 | 130.2 | 187.5 |


Weight in kilograms that a vacuum cup can hold at a given vacuum

| Vacuum Cup Models | 900762 900766 | 900752 900767 | 900763 | 900764 | 900753 900768 | 900754 900769 | 900765 | 900755 900770 | 900756 900758 | 900757 900771 | 900759 | 900760 | 900761 |
|-----------------------------|------------------|------------------|--------|--------|------------------|------------------|--------|------------------|------------------|------------------|--------|--------|--------|
| Area of cup cm ² | 3 | 5 | 6 | 10 | 11 | 20 | 28 | 32 | 54 | 92 | 127 | 182 | |
| Vacuum kPa | 17 | 0.2 | 0.4 | 0.6 | 0.8 | 1.0 | 1.7 | 2.4 | 2.7 | 4.6 | 7.9 | 10.9 | 15.7 |
| | 34 | 0.5 | 0.9 | 1.1 | 1.7 | 2.0 | 3.5 | 4.8 | 5.5 | 9.2 | 15.8 | 21.9 | 31.5 |
| | 51 | 0.7 | 1.3 | 1.7 | 2.5 | 3.0 | 5.2 | 7.3 | 8.2 | 13.9 | 23.7 | 32.8 | 47.2 |
| | 68 | 0.9 | 1.7 | 2.2 | 3.4 | 3.9 | 7.0 | 9.7 | 10.9 | 18.5 | 31.6 | 43.7 | 63.0 |
| | 71 | 1.0 | 1.8 | 2.3 | 3.5 | 4.1 | 7.3 | 10.2 | 11.5 | 19.4 | 33.2 | 45.9 | 66.1 |
| | 91 | 1.3 | 2.4 | 3.0 | 4.5 | 5.3 | 9.4 | 13.1 | 14.8 | 25.0 | 42.7 | 59.1 | 85.0 |


E-Vac® Vacuum Generators

Vacuum Cup Dimensions


EXAIR vacuum cups are vinyl. They are ideal for general purpose applications and provide excellent resistance to wear. The Durometer rating (used to indicate the flexibility and stiffness of the cup) is A50. Temperature range is 32°F to 125°F (0°C to 52°C).

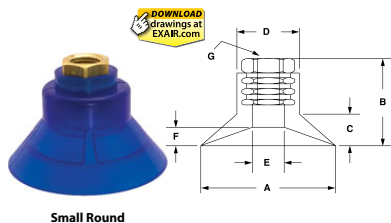


Small Round

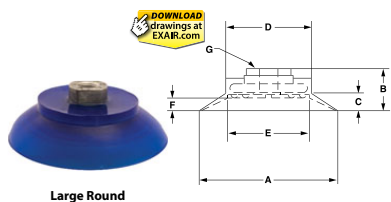

Large Round

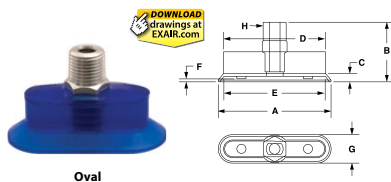

Oval

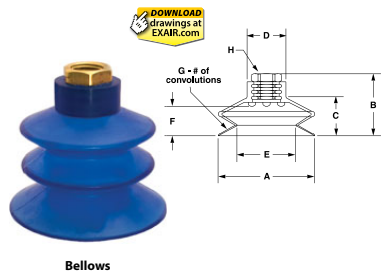

Bellows

| Vacuum Cups - Small Round | | | | | | | | | |
|---------------------------|----|------|------|------|------|------|------|----------|--------|
| Model | | A | B | C | D | E | F | G | Cleats |
| 900752 | in | 1.00 | 1.12 | 0.25 | 0.81 | 0.45 | 0.17 | 1/4 FNPT | No |
| | mm | 25 | 28 | 6 | 21 | 11 | 4 | | |
| 900753 | in | 1.50 | 0.90 | 0.28 | 1.25 | 1.06 | 0.12 | 1/4 FNPT | Yes |
| | mm | 38 | 23 | 7 | 32 | 27 | 3 | | |
| 900754 | in | 2.00 | 1.00 | 0.25 | 1.56 | 1.31 | 0.18 | 1/4 FNPT | Yes |
| | mm | 51 | 25 | 6 | 40 | 33 | 5 | | |
| 900755 | in | 2.50 | 1.80 | 0.72 | 1.35 | 0.95 | 0.62 | 1/4 FNPT | Yes |
| | mm | 64 | 46 | 18 | 34 | 24 | 16 | | |
| 900756 | in | 3.50 | 1.10 | 0.56 | 0.98 | 0.51 | 0.37 | 1/4 FNPT | No |
| | mm | 89 | 28 | 14 | 25 | 13 | 9 | | |

| Vacuum Cups - Large Round | | | | | | | | | |
|---------------------------|----|------|------|------|------|------|------|----------|--------|
| Model | | A | B | C | D | E | F | G | Cleats |
| 900757 | in | 3.25 | 1.15 | 0.50 | 2.23 | 1.87 | 0.37 | 3/8 FNPT | Yes |
| | mm | 83 | 29 | 13 | 57 | 47 | 9 | | |
| 900758 | in | 3.25 | 1.15 | 0.50 | 2.23 | 1.87 | 0.37 | 1/4 FNPT | Yes |
| | mm | 83 | 29 | 13 | 57 | 47 | 9 | | |
| 900759 | in | 4.25 | 1.18 | 0.50 | 2.75 | 2.43 | 0.37 | 3/8 FNPT | Yes |
| | mm | 108 | 30 | 13 | 70 | 62 | 9 | | |
| 900760 | in | 5.00 | 1.75 | 1.12 | 3.25 | 2.65 | 0.62 | 3/8 FNPT | Yes |
| | mm | 127 | 44 | 28 | 83 | 67 | 16 | | |
| 900761 | in | 6.00 | 1.31 | 0.50 | 4.75 | 4.90 | 0.12 | 1/2 FNPT | Yes |
| | mm | 152 | 33 | 13 | 121 | 124 | 3 | | |

| Vacuum Cups - Oval | | | | | | | | | | |
|--------------------|----|------|------|------|------|------|------|------|----------|--------|
| Model | | A | B | C | D | E | F | G | H | Cleats |
| 900762 | in | 1.00 | 1.06 | 0.12 | 0.81 | 0.76 | 0.09 | 0.50 | 1/8 MNPT | No |
| | mm | 25 | 27 | 3 | 21 | 19 | 2 | | | |
| 900763 | in | 2.00 | 1.06 | 0.12 | 1.81 | 1.76 | 0.09 | 0.50 | 1/8 MNPT | No |
| | mm | 51 | 27 | 3 | 46 | 45 | 2 | | | |
| 900764 | in | 1.73 | 1.03 | 0.21 | 1.35 | 1.21 | 0.09 | 0.87 | 1/8 MNPT | Yes |
| | mm | 44 | 26 | 5 | 34 | 31 | 2 | | | |
| 900765 | in | 2.96 | 0.93 | 0.19 | 0.92 | 2.34 | 0.20 | 1.47 | 1/8 FNPT | No |
| | mm | 75 | 24 | 5 | 23 | 59 | 5 | | | |


| Vacuum Cups - Bellows | | | | | | | | | | |
|-----------------------|----|------|------|------|------|------|------|---|----------|--------|
| Model | | A | B | C | D | E | F | G | H | Cleats |
| 900766 | in | 0.73 | 1.43 | 0.75 | 0.67 | 0.45 | 0.79 | 3 | 1/4 FNPT | No |
| | mm | 19 | 36 | 19 | 17 | 11 | 20 | | | |
| 900767 | in | 1.00 | 1.48 | 0.85 | 0.56 | 0.44 | 0.85 | 4 | 1/8 FNPT | No |
| | mm | 25 | 38 | 22 | 14 | 11 | 22 | | | |
| 900768 | in | 1.50 | 1.12 | 0.71 | 1.06 | 1.00 | 0.31 | 1 | 1/4 FNPT | Yes |
| | mm | 38 | 28 | 18 | 27 | 25 | 8 | | | |
| 900769 | in | 2.00 | 1.54 | 0.89 | 1.00 | 1.17 | 0.68 | 1 | 1/4 MNPT | Yes |
| | mm | 51 | 39 | 23 | 25 | 30 | 17 | | | |
| 900770 | in | 2.50 | 2.40 | 1.75 | 1.00 | 1.12 | 1.80 | 2 | 1/4 FNPT | No |
| | mm | 64 | 61 | 44 | 25 | 28 | 46 | | | |
| 900771 | in | 3.25 | 3.00 | 2.20 | 1.00 | 1.53 | 2.00 | 2 | 3/8 FNPT | No |
| | mm | 83 | 76 | 56 | 25 | 39 | 51 | | | |

MNPT = NPT Male
FNPT = NPT Female

Increased Energy And Vacuum Efficiency

Energy and vacuum efficiency are not limited to the Adjustable E-Vac vacuum generators. All E-Vac styles and models can offer significant improvements when looking to reduce the amount of compressed air used for a specific vacuum application. Once the appropriate amount of vacuum and flow for the application are determined, it is important to select the appropriate model that will deliver the best performance while using the least amount of compressed air that it takes to do the job.

Many companies have a centralized vacuum system where the vacuum is generated at a location that is far away from the point of use. The long runs of piping through the plant produce line loss and it is often difficult to obtain that perfect balance of vacuum and flow required for the application. The compact In-line or Modular E-Vac vacuum generators eliminate this problem since they can be mounted at the point where the vacuum source is needed. EXAIR's Application Engineers can help you to select the E-Vac vacuum generator and vacuum cups that provide the right amount of lifting capability while minimizing the amount of compressed air usage.

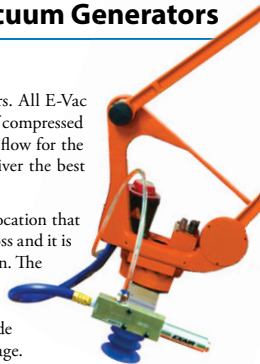

Other Applications For E-Vac

E-Vacs are used in many other “non-lifting” applications. They are commonly used for vessel evacuation, clamping, chucking, and other work holding applications. Many types of automated equipment use vacuum to evacuate, grip, hold, align and insert parts. These vacuums can be used for surface mounting, vacuum packaging, bag opening, label placement, carton forming and container evacuation.

Another popular application is using the E-Vac for liquid sampling. This process can easily be accomplished using an E-Vac vacuum generator attached to a liquid holding tube. When the tube is dipped into the vat, tank or container, the compressed air is turned on so it draws a specific volume of liquid up into the tube. When the compressed air is turned off, the liquid flows from the tube and can be dispensed into a container or machine to be analyzed.

Accessories Needed To Build Your Vacuum System

EXAIR offers a variety of mufflers, tubing, check valves, and fittings shown on [page 110](#) that make it easy to build a vacuum system best suited to your vacuum application.

When using E-Vac vacuum generators, it is important to use a source of clean, dry compressed air that will keep them operating at their peak performance. Automatic drain filter separators to keep the compressed air free of contaminants and moisture can be found on [page 164](#). Oil removal filters that remove oil particulates that are common to many compressed air systems are also shown. Pressure regulators, shutoff valves, compressed air hose, fittings, and solenoid valves (to electrically turn the compressed air on and off) can be found on [pages 165 through 168](#).

• Mufflers

Optional silencing mufflers are available that permit maximum exhaust of the E-Vac unit so cycle speed is not reduced. The Standard Muffler (for use with In-Line and Modular E-Vacs only) has a closed end and is suitable for applications that are free of dust and debris. The Straight Through Muffler is recommended where particulates are present since it will not accumulate debris that can erode performance. Straight Through Mufflers offer the best sound level reduction (up to 26 dBA). Sound levels are shown on [pages 101, 102 and 106](#).

• Fittings and Tubing

The vacuum port of the E-Vac has an NPT thread (a vacuum cup can be threaded directly into it). For vacuum cups that are remotely located, push-in connector fittings (most have global threads for use with NPT and BSP), or hose barb fittings can be installed on the E-Vac and the vacuum cup. Polyurethane vacuum tubing is available (10', 20', 30', 40' and 50' lengths) to connect them. For best performance, the length of the tubing should be minimized to achieve the best attach and release times.

• Check Valve

A vacuum check valve is available to hold the vacuum in case of compressed air loss. E-Vac vacuum generators that are used without a check valve will release the load if there is a significant drop in compressed air pressure or the supply of compressed air is lost.

E-Vac® Vacuum Generators



| Mufflers | | |
|----------|------------------|----------|
| Model | Description | Thread |
| 900800 | Standard Muffler | 1/4 MNPT |
| 900801 | Standard Muffler | 3/8 MNPT |
| 900802 | Standard Muffler | 1/2 MNPT |



| Straight Through | | |
|------------------|------------------|----------|
| Model | Description | Thread |
| 890001 | Straight Through | 1/4 MNPS |
| 890002 | Straight Through | 3/8 MNPS |
| 890003 | Straight Through | 1/2 MNPS |
| 890004 | Straight Through | 3/4 MNPS |
| 890005 | Straight Through | 1 MNPS |



| Check Valves | | |
|--------------|-------------|----------|
| Model | Description | Thread |
| 900804 | Check Valve | 1/4 FNPT |
| 900805 | Check Valve | 3/8 FNPT |
| 900806 | Check Valve | 1/2 FNPT |



| E-Vac Accessories | | |
|-------------------|-----------------------------------|--|
| Push-In Connector | | |
| Model | Description | |
| 900773 | 1/4 Tube x 1/8 FNPT | |
| 900774 | 1/4 Tube x 1/8 Male Global Thread | |
| 900775 | 1/4 Tube x 1/4 Male Global Thread | |
| 900776 | 1/4 Tube x 3/8 Male Global Thread | |
| 900777 | 3/8 Tube x 1/8 Male Global Thread | |
| 900778 | 3/8 Tube x 1/4 Male Global Thread | |
| 900779 | 3/8 Tube x 3/8 Male Global Thread | |
| 900780 | 3/8 Tube x 1/2 Male Global Thread | |



| Push-In Swivel Elbow Connector | | |
|--------------------------------|-----------------------------------|--|
| Model | Description | |
| 900781 | 1/4 Tube x 1/8 Male Global Thread | |
| 900782 | 1/4 Tube x 1/4 Male Global Thread | |
| 900783 | 1/4 Tube x 3/8 Male Global Thread | |
| 900784 | 3/8 Tube x 1/8 Male Global Thread | |
| 900785 | 3/8 Tube x 1/4 Male Global Thread | |
| 900786 | 3/8 Tube x 3/8 Male Global Thread | |
| 900787 | 3/8 Tube x 1/2 Male Global Thread | |



| Push-In Swivel Branch Tee Connector | | |
|-------------------------------------|-----------------------------------|--|
| Model | Description | |
| 900788 | 1/4 Tube x 1/8 Male Global Thread | |
| 900789 | 1/4 Tube x 1/4 Male Global Thread | |
| 900790 | 3/8 Tube x 1/4 Male Global Thread | |
| 900791 | 3/8 Tube x 3/8 Male Global Thread | |

MNPT = NPT Male
FNPT = NPT Female



| E-Vac Accessories - continued | | |
|-------------------------------|------------------------------------|--|
| Push-In Bulkhead Connector | | |
| Model | Description | |
| 900792 | Female Union - 1/4 Tube x 1/4 Tube | |
| 900793 | Female Union - 3/8 Tube x 3/8 Tube | |
| 900809 | Female Union - 1/4 Tube x 1/4 NPT | |
| 900810 | Female Union - 3/8 Tube x 1/4 NPT | |



| Vacuum Tubing | | |
|--|-------------------------------|--|
| Tubing lengths are 10', 20', 30', 40', and 50'. Select the tubing model number (diameter) and indicate the length with a dash. Example: A Model 900795-20 is 1/4" tubing x 20' long. | | |
| Model | Description | |
| 900795- | 1/4" O.D. Polyurethane Tubing | |
| 900796- | 3/8" O.D. Polyurethane Tubing | |



| Mounting Clip | | |
|---------------|--------------------------|--|
| Model | Description | |
| 900798 | Mounting Clip with Strap | |



| Hose Barbs | | |
|------------|--------------------------|--|
| Model | Description | |
| 900969 | 1/4 MNPT x 1/4 Hose Barb | |
| 900970 | 1/4 MNPT x 3/8 Hose Barb | |
| 900971 | 1/4 MNPT x 1/2 Hose Barb | |
| 900972 | 1/2 MNPT x 1/4 Hose Barb | |
| 900973 | 1/2 MNPT x 3/8 Hose Barb | |
| 900974 | 1/2 MNPT x 1/2 Hose Barb | |
| 900975 | 1/2 MNPT x 3/4 Hose Barb | |
| 900976 | 3/4 MNPT x 3/8 Hose Barb | |
| 900977 | 3/4 MNPT x 1/2 Hose Barb | |
| 900978 | 3/4 MNPT x 3/4 Hose Barb | |
| 900979 | 3/4 MNPT x 1 Hose Barb | |
| 900980 | 1 MNPT x 3/4 Hose Barb | |
| 900981 | 1 MNPT x 1 Hose Barb | |



| Hose | | |
|--|----------------|--|
| Hose lengths are 10', 20', 30', 40', and 50'. Select the hose model number (diameter) and indicate the length with a dash. Example: A Model 900796-20 is 1/4" hose x 20' long. | | |
| Model | Description | |
| 900796- | 1/4" I.D. Hose | |
| 900689- | 3/8" I.D. Hose | |
| 900690- | 1/2" I.D. Hose | |
| 900063- | 3/4" I.D. Hose | |
| 900064- | 1" I.D. Hose | |



| Vacuum Gauge | | |
|--------------|-------------------------|----------|
| Model | Description | Thread |
| 900811 | Vacuum Gauge (0-30" Hg) | 1/8 MNPT |

MNPT = NPT Male
FNPT = NPT Female


Accessories

Filter Separators

Model 9003




Model 9004




Model 9001 & 9032



Model 9002

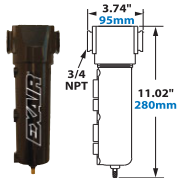

Model 9066

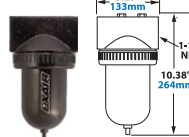


EXAIR's Filter Separators remove water, dirt and rust from your compressed air system. They prevent these contaminants from plugging or damaging the compressed air products. A Filter Separator should be installed prior to an oil removal filter, pressure regulator or valve.

The Model 9003 Manual Drain Filter has a polycarbonate bowl and a 20 micron filter element. A manual drain is used to empty the filter. Model 9001, 9002, 9004, 9032, and 9066 Automatic Drain Filter Separators have a metal bowl and a 5 micron filter element (Model 9004 has a polycarbonate bowl with a metal guard). An internal float automatically activates the drain when the bowl becomes full.


| Model # | Description |
|-------------|---|
| 9003 | Manual Drain Filter Separator, 1/4 NPT, 27 SCFM (765 SLPM) |
| 9004 | Automatic Drain Filter Separator, 1/4 NPT, 43 SCFM (1,218 SLPM) |
| 9001 | Automatic Drain Filter Separator, 3/8 NPT, 65 SCFM (1,841 SLPM) |
| 9032 | Automatic Drain Filter Separator, 1/2 NPT, 90 SCFM (2,548 SLPM) |
| 9002 | Automatic Drain Filter Separator, 3/4 NPT, 220 SCFM (6,230 SLPM) |
| 9066 | Automatic Drain Filter Separator, 1-1/4 NPT, 400 SCFM (11,327 SLPM) |

Oil Removal Filters


Model 9027

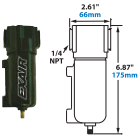


Model 9006

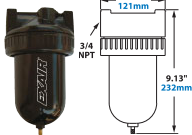

Model 9010

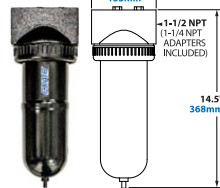

Model 9005

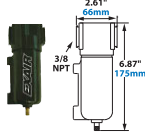


EXAIR's Model 9027, 9005, 9006, and 9010 Oil Removal Filters remove oil particulate that is typical of many compressed air systems.

A 0.03 micron element is used to trap submicron particles. An internal float automatically activates the drain when full.


| Model # | Description |
|-------------|--|
| 9027 | Oil Removal Filter, 1/4 NPT, 24 SCFM (680 SLPM) |
| 9005 | Oil Removal Filter, 3/8 NPT, 15 - 37 SCFM (425-1,048 SLPM) |
| 9006 | Oil Removal Filter, 3/4 NPT, 50 - 150 SCFM (1,415-4,248 SLPM) |
| 9010 | Oil Removal Filter, 1-1/2 NPT, 130-310 SCFM (3,679-8,773 SLPM) |

Filter Mounting Brackets


Model 900395

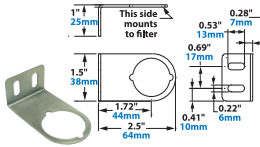

Model 900396

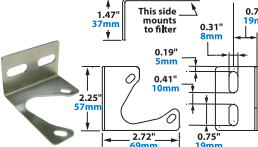

Model 900397

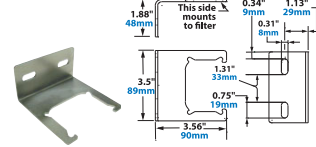


| Model # | Description |
|---------------|---|
| 900395 | Mounting Bracket for Model 9003 |
| 900396 | Mounting Bracket for Model 9001, 9004, 9005, 9027, and 9032 |
| 900397 | Mounting Bracket for Model 9002 |


Pressure Regulators

EXAIR's Model 9008, 9033, 9009 and 9067 Pressure Regulators permit easy selection of the operating pressure. A pressure gauge is included.


Model 9008

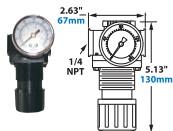

Model 9033

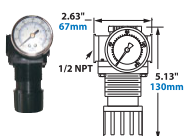


Model 9009

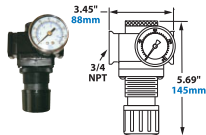

Model 9011




Model 9067

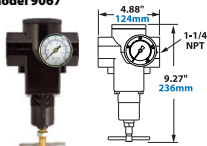

| Model # | Description |
|-------------|--|
| 9008 | Pressure Regulator with Gauge, 1/4 NPT, 50 SCFM (1,415 SLPM) |
| 9033 | Pressure Regulator with Gauge, 1/2 NPT, 100 SCFM (2,832 SLPM) |
| 9009 | Pressure Regulator with Gauge, 3/4 NPT, 220 SCFM (6,230 SLPM) |
| 9067 | Pressure Regulator with Gauge, 1-1/4 NPT, 600 SCFM (16,990 SLPM) |
| 9011 | Pressure Gauge Only, 1/4 NPT, 0-160 PSI (0-11 BAR) |


Pressure Regulator Mtg Brackets

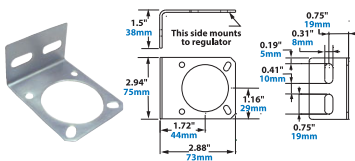

This optional mounting bracket fits Models 9008, 9033 and 9009 Pressure Regulators and includes the bracket and a locking ring.

| Model # | Description |
|---------------|--|
| 900398 | Mounting Bracket for Model 9008, 9033 and 9009 |


Mounting and Coupling Kits



| Model # | Description |
|-------------|---|
| 9046 | Mounting and Coupling Kit for Model 9001 Filter/Model 9008 Regulator and Model 9032 Filter/Model 9033 Regulator |
| 9047 | Mounting and Coupling Kit for Model 9002 Filter/Model 9009 Regulator |
| 9048 | Mounting and Coupling Kit for Model 9004 Filter/Model 9005 Oil Removal Filter |

Coupling Kits


Model 900394

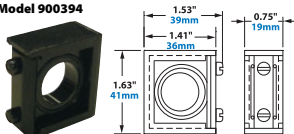

EXAIR's Coupling Kits are interlocking slides that couple the modular filters and pressure regulators together.

| Model # | Description |
|---------------|--|
| 900394 | Fits auto drain filters and regulators with 1/4 NPT, 3/8 NPT and 1/2 NPT threads |
| 900552 | Fits auto drain filters and regulators with 3/4 NPT threads |

Model 900552

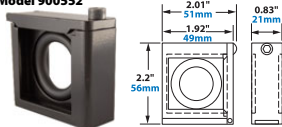

Accessories

Solenoid Valves



Solenoid Valves are available in a variety of flow rates and voltages. All models are UL Listed and are CE and RoHS compliant.



| Model # | Description |
|---------|--|
| 9018 | NEMA 4-4X Solenoid Valve, 110-120V, 50/60Hz, 1/4 NPT, 40 SCFM (1,133 SLPM) |
| 9020 | Solenoid Valve, 120V, 50/60Hz, 1/4 NPT, 40 SCFM (1,133 SLPM) |
| 9021 | Solenoid Valve, 200-240V, 50/60Hz, 1/4 NPT, 40 SCFM (1,133 SLPM) |
| 9024 | NEMA 4-4X Solenoid Valve, 240V, 50/60Hz, 1/4 NPT, 40 SCFM (1,133 SLPM) |
| 9059 | NEMA 4-4X Solenoid Valve, 24VDC, 3/4 NPT, 200 SCFM (5,664 SLPM) |
| 9031 | Solenoid Valve, 24VDC, 1/4 NPT, 40 SCFM (1,133 SLPM) |
| 9034 | Solenoid Valve, 120V, 50/60Hz, 1/2 NPT, 100 SCFM (2,832 SLPM) |
| 9035 | Solenoid Valve, 240V, 50/60Hz, 1/2 NPT, 100 SCFM (2,832 SLPM) |
| 9058 | NEMA 4-4X Solenoid Valve, 24VDC, 1/2 NPT, 100 SCFM (2,832 SLPM) |
| 9036 | Solenoid Valve, 120V, 50/60Hz, 3/4 NPT, 200 SCFM (5,664 SLPM) |
| 9037 | Solenoid Valve, 240V, 50/60Hz, 3/4 NPT, 200 SCFM (5,664 SLPM) |
| 9065 | Solenoid Valve, 24VDC, 1 NPT, 350 SCFM (9,911 SLPM) |

Valves



| Model # | Description |
|---------|-------------------------|
| 9012 | Manual Valve, 1/4 NPT |
| 900340 | Manual Valve, 3/8 NPT |
| 900343 | Manual Valve, 1/2 NPT |
| 900743 | Manual Valve, 3/4 NPT |
| 900346 | Manual Valve, 1 NPT |
| 900744 | Manual Valve, 1-1/4 NPT |

| Model # | Description |
|---------|---------------------|
| 9040 | Foot Valve, 1/4 NPT |

Swivel Fittings



EXAIR's Swivel Fittings make it easy to adjust the position of the Air Nozzles, Air Jets, and Air Amplifiers. Swivel Fittings permit a movement of 25 degrees from the center axis for a total movement of 50 degrees. Type 303 and 316 Stainless Steel.

| Model # | Description |
|---------|--|
| 9201 | M4 x 0.5mm female x 1/8 MNPT Swivel Fitting |
| 9202 | M5 x 0.5mm female x 1/8 MNPT Swivel Fitting |
| 9203 | M6 x 0.75mm female x 1/8 MNPT Swivel Fitting |
| 9052 | 1/8 NPT Swivel Fitting |
| 9053 | 1/4 NPT Swivel Fitting |
| 9068 | 3/8 NPT Swivel Fitting |
| 9069 | 1/2 NPT Swivel Fitting |
| 9023 | 3/4 NPT Swivel Fitting |

ETC™ Electronic Temperature Control



Model 9238 - 120VAC, 50/60Hz
Model 9239 - 240VAC, 50/60Hz



Setting Temperature: Membrane push button control
Power Supply Current: 165 mA max
Sensor: Type J Thermocouple
ETC enclosure: Polycarbonate NEMA 4X, IP 66, UL508, UL94-5V
Temperature Sampling Rate: 1 Reading/second
Max. Temp.: 158°F (70°C)
Solenoid Valve: 1/4 NPT, 40 SCFM (1,133 SLPM)
CE and RoHS Compliant

EXAIR's digital ETC™ (Electronic Temperature Control) provides precise temperature control for your electrical enclosure. The LED readout of the ETC displays the internal temperature of the electrical enclosure (°F or °C) that is constantly being monitored by a quick response thermocouple.

Thermostat



The adjustable thermostat is factory set at 95°F (35°C). It will normally hold $\pm 2^\circ\text{F}$ (1°C) of the desired temperature setting. It is rated 24V-240V AC or DC, 50/60Hz and is UL Recognized, CSA Certified.



| Model # | Description |
|---------|-------------|
| 9017 | Thermostat |

Magnetic Bases

Model 9042 Model 9043 Model 9029



Magnetic bases are suited to applications where frequent movement of the air product is required. The powerful magnet permits horizontal or vertical mounting. A shutoff valve is provided that can be used to infinitely vary the force and flow.

| Model # | Description |
|---------|--|
| 9042 | One Outlet Magnetic Base with Shutoff Valve |
| 9043 | Two Outlet Magnetic Base with Shutoff Valve |
| 9029 | One Outlet Swivel Magnetic Base with Shutoff Valve |

Stay Set Hoses

For applications where frequent repositioning of the air product is required, the Flexible Stay Set Hoses™ are ideal. Simply mount the hose in close proximity to the application and bend it. Since the hose has “memory”, it will not creep or bend. It will always keep the aim until physically moved to the next position and will withstand temperatures of up to 158°F (70°C).

(1/4 male NPT fitting on one end, 1/8 female NPT on the other)

| Model # | Description | Image |
|---------|---------------------------------|-------|
| 9256 | 6" (152mm) 1/4 MNPT x 1/8 FNPT | |
| 9262 | 12" (305mm) 1/4 MNPT x 1/8 FNPT | |
| 9268 | 18" (457mm) 1/4 MNPT x 1/8 FNPT | |
| 9274 | 24" (610mm) 1/4 MNPT x 1/8 FNPT | |
| 9280 | 30" (762mm) 1/4 MNPT x 1/8 FNPT | |
| 9286 | 36" (914mm) 1/4 MNPT x 1/8 FNPT | |

(1/4 male NPT fitting on each end)

| Model # | Description | Image |
|---------|---------------------------------|-------|
| 9206 | 6" (152mm) 1/4 MNPT x 1/4 MNPT | |
| 9212 | 12" (305mm) 1/4 MNPT x 1/4 MNPT | |
| 9218 | 18" (457mm) 1/4 MNPT x 1/4 MNPT | |
| 9224 | 24" (610mm) 1/4 MNPT x 1/4 MNPT | |
| 9230 | 30" (762mm) 1/4 MNPT x 1/4 MNPT | |
| 9236 | 36" (914mm) 1/4 MNPT x 1/4 MNPT | |

Hoses

12 Foot (3.66m) Coiled Hoses

| Model # | Description | Image | Model # | Description | Image | Model # | Description |
|---------|---|-------|---------|---|-------|---------|---|
| 900106 | 1/4 NPT x 1/4" ID Coiled Hose With Swivel | | 900750 | 1/4 NPT x 3/8" ID Coiled Hose With Swivel | | 900751 | 3/8 NPT x 3/8" ID Coiled Hose With Swivel |

Conveying Hose

Hose lengths are 10', 20', 30', 40' and 50'. Select the hose model number (diameter) and indicate the length with a dash. Example: A Model 6931-20 is 1" ID Hose x 20' long.

| Model # | Description | Model # | Description | Model # | Description |
|---------|--------------|---------|----------------|---------|----------------|
| 6928- | Hose 3/8" ID | 6931- | Hose 1" ID | 6934- | Hose 2" ID |
| 6929- | Hose 1/2" ID | 6932- | Hose 1-1/4" ID | 6935- | Hose 2-1/2" ID |
| 6930- | Hose 3/4" ID | 6933- | Hose 1-1/2" ID | 6936- | Hose 3" ID |

Compressed Air Hose

Compressed air hose is made of reinforced synthetic rubber to assure long life and protection against ozone, weathering, and temperatures up to 158°F (70°C). Includes a 1/4 NPT male brass fitting on each end. Hose lengths are 10', 20', 30', 40' and 50'. Indicate the length with a dash. Example: A Model 900061-30 is 3/8" ID Hose x 30' long.

| Model # | Description |
|---------|---|
| 900061 | Compressed Air Hose, 1/4 MNPT x 1/4 MNPT (3/8" ID Hose) |
| 901179 | Compressed Air Hose, 1/2 MNPT x 1/2 MNPT (1/2" ID Hose) |

Accessories


60 Gallon Receiver Tank



Some applications require an intermittent demand for a high volume of compressed air. This can cause fluctuations in pressure and volume throughout the compressed air system with some points being "starved" for compressed air. EXAIR's Model 9500-60 60 Gallon Receiver Tank can be installed near the point of high demand so there is an additional supply of compressed air available for a short duration. The time between the high volume demand occurrences should be long enough so the compressor has enough time to replenish the EXAIR 60 Gallon Receiver Tank.

The 60 gallon vertical steel tank with mounting feet saves floor space and meets the American Society of Mechanical Engineers (ASME) pressure vessel code. (It is not ASME rated for vacuum.) A drain valve is provided for placement at the bottom of the tank to discharge liquid and contaminants.

A user supplied check valve installed upstream of the receiver tank will maintain the tank at maximum pressure so upstream uses of compressed air do not deplete the tank. A user supplied needle valve can regulate the refilling of the receiver tank, effectively reducing the large intermittent air requirement into a smaller average demand.

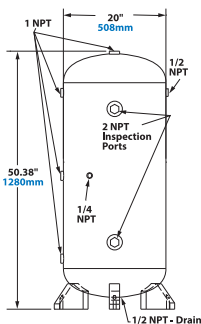

Receiver Tank

| Model # | Description |
|---------|-------------------------|
| 9500-60 | 60 Gallon Receiver Tank |

- Pressure tank has a primer finish
- Temperature rating is -20° to 450°F
- Tank maximum pressure is 200 PSIG
- No plugs are included for open ports. User must supply pressure rated plugs and pressure relief valve.
- Weight is 165 lbs. (75 kg)
- Please consult your local code requirements prior to installation.

Compressed Air Fittings



| Hex Nipple | | | |
|------------|----------|---------------------|--|
| Model # | Material | Thread Size | |
| 9890 | Brass | 1/8 MNPT x 1/8 MNPT | |
| 9944 | Brass | 1/4 MNPT x 1/4 MNPT | |
| 9759 | Brass | 3/8 MNPT x 3/8 MNPT | |
| 9760 | Brass | 1/2 MNPT x 1/2 MNPT | |
| 9761 | Brass | 3/4 MNPT x 3/4 MNPT | |
| 9958 | 304SS | 1/8 MNPT x 1/8 MNPT | |
| 9959 | 304SS | 1/4 MNPT x 1/4 MNPT | |
| 9960 | 304SS | 3/8 MNPT x 3/8 MNPT | |
| 9961 | 304SS | 1/2 MNPT x 1/2 MNPT | |



| Close Nipple | | | |
|--------------|----------|---------------------|--|
| Model # | Material | Thread Size | |
| 9551 | Brass | 1/4 MNPT x 1/4 MNPT | |
| 9752 | Brass | 3/8 MNPT x 3/8 MNPT | |
| 900745 | Brass | 1/2 MNPT x 1/2 MNPT | |
| 900559 | Brass | 3/4 MNPT x 3/4 MNPT | |
| 900309 | NP Brass | 1/8 MNPT x 1/8 MNPT | |
| 900084 | NP Brass | 1/4 MNPT x 1/4 MNPT | |
| 900435 | NP Brass | 3/8 MNPT x 3/8 MNPT | |
| 900436 | NP Brass | 1/2 MNPT x 1/2 MNPT | |
| 900409 | 316SS | 1/8 MNPT x 1/8 MNPT | |
| 900160 | 316SS | 1/4 MNPT x 1/4 MNPT | |
| 900505 | 316SS | 3/8 MNPT x 3/8 MNPT | |
| 900506 | 316SS | 1/2 MNPT x 1/2 MNPT | |



| Coupler | | | |
|---------|----------|---------------------|--|
| Model # | Material | Thread Size | |
| 900453 | NP Brass | 1/8 FNPT x 1/8 FNPT | |
| 9871 | Brass | 1/4 FNPT x 1/4 FNPT | |

MNPT = Male NPT
FNPT = Female NPT

NP = Nickel Plated



| Reducer | | | |
|---------|----------|---------------------|--|
| Model # | Material | Thread Size | |
| 900405 | Brass | 1/4 MNPT x 1/8 FNPT | |
| 900105 | Brass | 1/4 FNPT x 1/8 MNPT | |
| 9553 | Brass | 3/8 MNPT x 1/4 MNPT | |
| 9897 | Brass | 1/2 MNPT x 3/8 MNPT | |
| 900736 | Brass | 1/2 MNPT x 1/4 MNPT | |
| 900622 | Brass | 1/2 MNPT x 1/4 FNPT | |
| 900985 | Brass | 1/2 FNPT x 3/8 MNPT | |



| Tee | | | |
|---------|----------|--------------------------------|--|
| Model # | Material | Thread Size | |
| 900005 | Brass | 1/4 FNPT x 1/4 FNPT x 1/4 MNPT | |
| 9851 | Brass | 1/4 MNPT x 1/4 MNPT x 1/4 MNPT | |
| 9971 | Brass | 3/8 FNPT x 1/4 FNPT x 3/8 MNPT | |
| 9896 | Brass | 3/8 FNPT x 3/8 FNPT x 3/8 FNPT | |
| 900621 | Brass | 1/2 FNPT x 1/2 FNPT x 1/2 FNPT | |
| 900734 | Brass | 1/2 FNPT x 1/4 FNPT x 1/2 FNPT | |



| Elbow | | | |
|---------|----------|---------------------|-----|
| Model # | Material | Thread Size | |
| 7674 | Brass | 1/8 MNPT x 1/8 FNPT | 45° |
| 9555 | Brass | 1/4 MNPT x 1/4 FNPT | 90° |
| 9895 | Brass | 3/8 MNPT x 3/8 FNPT | 90° |
| 900073 | Brass | 1/4 MNPT x 3/8 Tube | 90° |



| Cross | | | |
|---------|----------|-------------|--|
| Model # | Material | Thread Size | |
| 900735 | Brass | 1/2 FNPT | |



| Bulkhead Fitting | | | |
|------------------|----------|---------------------|--|
| Model # | Material | Thread Size | |
| 900069 | Brass | 3/4 MNPT x 1/4 FNPT | |